


Assembly method of coaxial connector


Part no	CN00878	TITLE	SMA50 CABLE JB UL10607
Page.	No.1	DATE	2009. 12. 15.




RF & MICROWAVE
TECHNOLOGY
Tel : 82-32-347-8015
Fax : 82-32-347-8017

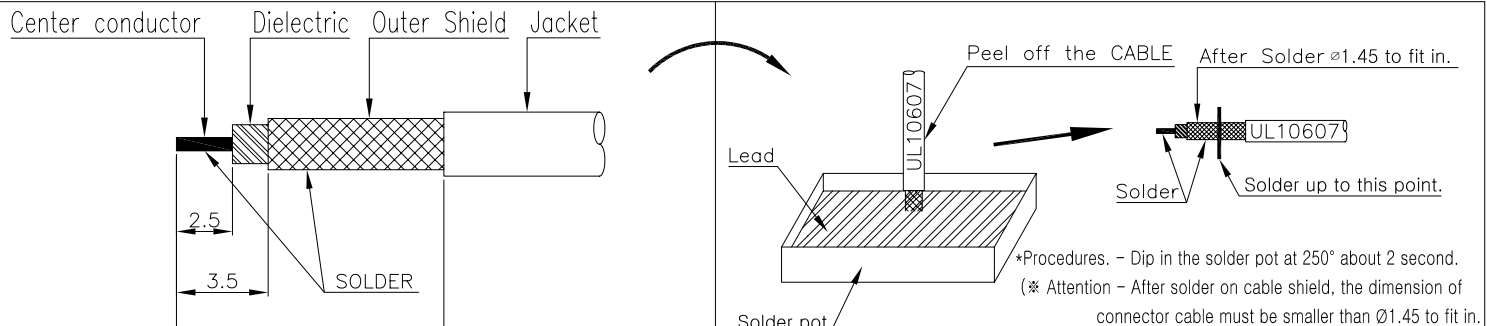


[Picture 1.] Peel off the cable accordingly. (Solder after peeling-off process)

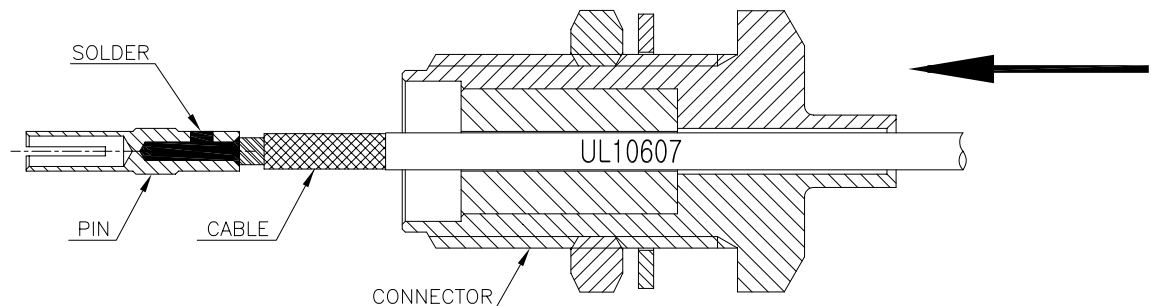

[Picture 2.] Operate SOLDER & PIN process after the cable pass through the product.

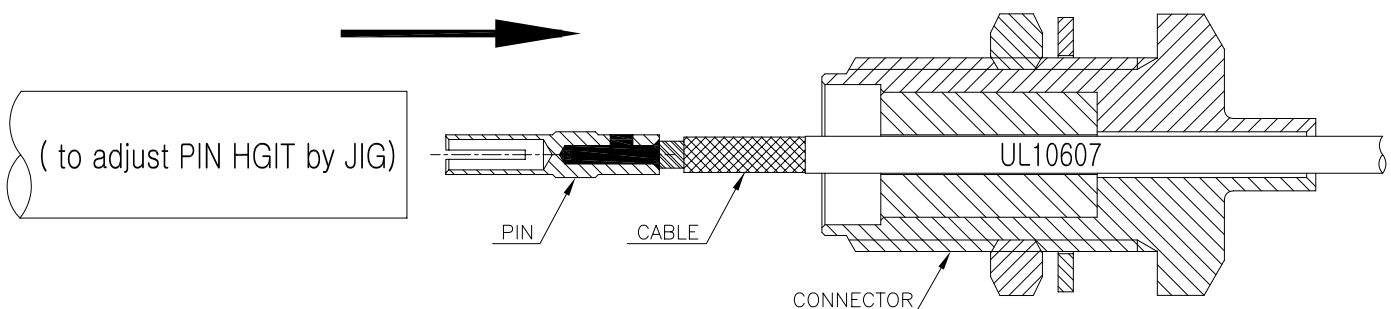

[Picture 3.] Use JIG with PIN HIGH to push PIN in.

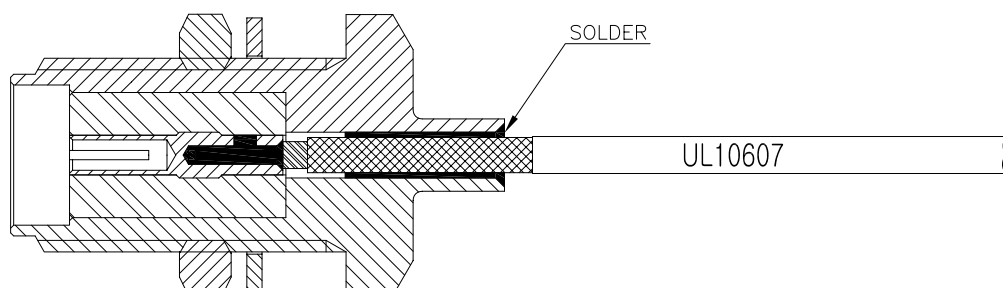

[Picture 4.] Solder between CONNECTOR and CABLE/Outer Shield.